



 

 
 


 
 






 



















 



**CUADRO DE IDENTIFICACIÓN
POTENCIA Y PAR A TRANSMITIR**

**IDENTIFICATION TABLE
POWER AND TORQUE TO BE TRANSMITTED**

Modelo Model Modele Modell	Crucetas Crossheads Croisillons Kreuzgarnitur Dimensiones y código Code and dimensions Dimensions et code Abmessungen und code	100 Serie · Series · Serie · Serie 	200 Serie · Series · Serie · Serie 	300 Serie · Series · Serie · Serie 	500 Serie · Series · Serie · Serie 
02	 403	23  1002 24	003  2002 002		
03	 840	35  1003 36	005  2003 004		
04	 406	35  1004 36	008  2004 005		
05	 2140A	35  1005 36	008  2005 007		
06	 2150		010  2006 009		
35	 2224	79  1035 80		 3035 R.5 R.4	
07	 2200A	79  1007 80	012  2007 009	 3007 R.5 R.4	
08	 2220A	79  1008 80	012  2008 011	 3008 R.5 R.4	23  5008 62
36	 2226	79  1036 80		 3036 R.5 R.4	
09	 2230		012  2009 011	 3009 R.5 R.4	 5009 62
10	 2240A			 3010 R.5 R.4	 5010 162